



WARNING!

1.877.FASTOYS

TRINITY RACING DOES NOT TAKE RESPONSIBILITY FOR DAMAGES THAT MAY OCCUR DURING OPERATION OF YOUR VEHICLE UNDER IMPROPER JET SETTINGS. IT IS THE FINAL RESPONSIBILITY OF THE OWNER/RIDER TO ADJUST JETTING TO SPECIFIC RIDING CONDITIONS AND ELEVATION BEFORE RIDING

Due to the different riding conditions and limitations of the powdercoating process, Trinity Racing cannot guaranty the **optional** powdercoated colors life expectancy on our exhaust systems.

NOTE:

To ease installation we recommend using WD40 or similar product to lubricate joint(s) on the Head & Mid pipes before installation.

PLEASE FOLLOW ALL OF THESE INSTRUCTIONS CAREFULLY

POLARIS RZR EXHAUST INSTRUCTIONS

PLEASE CHECK BOX FOR FOLLOWING ITEMS:

- 1 Short Head Pipe
- 1 Long Head Pipe
- 1 two into one collector
- 1 mid section
- 2 Small Header Flanges
- 1 Muffler
- 1 Mounting Bracket
- 6 5mm x 16mm Bolts
- 6 5mm lock washers
- 1 Muffler End-Cap
- 1 Heat Shield

INSTALLATION INSTRUCTIONS

Save your stock parts. Some will be used for installation of new pipe.

1. Remove your stock exhaust system.
2. Be sure your exhaust gaskets are still on the cylinder head and are in good shape.
3. Slide the small header flanges over the short and long header pipes.
4. Place header pipes into place and use the stock header bolts to hold them in place. Do not completely tighten bolts yet (long header on left & short header on right side.)
5. Place the collector onto the ends of head pipes.
6. Place the mid-section onto the end of the collector.
7. Bolt bracket to mid-section and frame.
8. Go over the complete system and tighten all the nuts and bolts before starting the bike.
9. Install Muffler End-Cap onto the muffler using the supplied 5mm bolts and lock washers
10. Before starting your UTV with the Stage IV exhaust installed, clean the stainless steel sections (carburetor cleaner/brake cleaner, etc.) so as to remove all oils left from your hands during installation.
11. After your first ride please re-check all the hardware tightness.

To take full advantage of your new Stage IV exhaust system, Trinity Racing recommends purchasing our Stage IV Powerflow intake system and Stage IV EFI fuel controller to optimize your intake and electronic fuel injection systems.

Without a Stage IV EFI fuel controller, your UTV will run a lean fuel mixture which can cause engine malfunction.

THANK YOU FOR YOUR BUSINESS. HAVE A FUN AND SAFE RIDE!



WARNING!

1.877.FASTOYS

TRINITY RACING DOES NOT TAKE RESPONSIBILITY FOR DAMAGES THAT MAY OCCUR DURING OPERATION OF YOUR VEHICLE UNDER IMPROPER JET SETTINGS. IT IS THE FINAL RESPONSIBILITY OF THE OWNER/RIDER TO ADJUST JETTING TO SPECIFIC RIDING CONDITIONS AND ELEVATION BEFORE RIDING.

POLARIS RZR EXHAUST HEAT SHIELD INSTRUCTIONS




MUST INSTALL SUPPLIED HEAT SHIELD TO PREVENT DAMAGE TO VEHICLE

INSTALLATION INSTRUCTIONS

- 1) Remove bolt (A) and (B) from the bed cover.
- 2) Slide new heat shield between the frame and the bed cover (Align heat shield as illustration below)
- 3) Re-install bolt (A) and (B)

TOP VIEW

WITH BED REMOVED

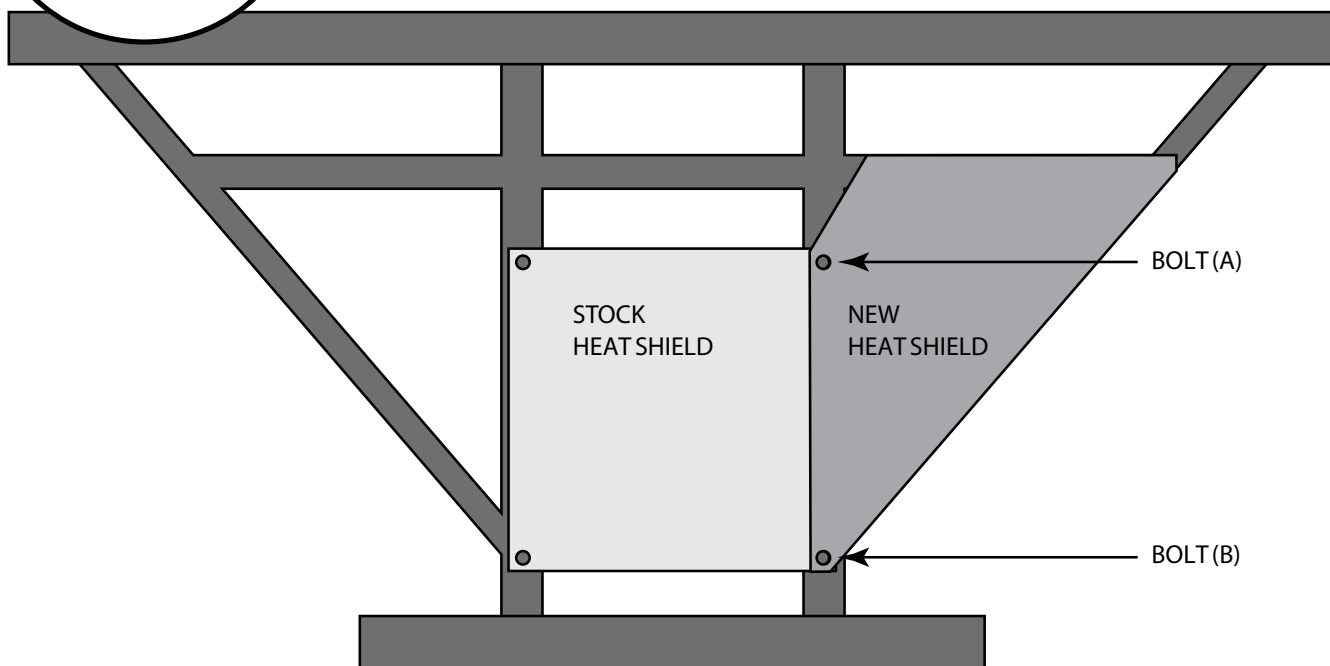

BACK OF UTV