



WARNING!

1.877.FASTOYS

TRINITY RACING DOES NOT TAKE RESPONSIBILITY FOR DAMAGES THAT MAY OCCUR DURING OPERATION OF YOUR VEHICLE UNDER IMPROPER JET SETTINGS. IT IS THE FINAL RESPONSIBILITY OF THE OWNER/RIDER TO ADJUST JETTING TO SPECIFIC RIDING CONDITIONS AND ELEVATION BEFORE RIDING

Due to the different riding conditions and limitations of the powdercoating process, Trinity Racing cannot guaranty the **optional** powdercoated colors life expectancy on our exhaust systems.

NOTE:

To ease installation we recommend using WD40 or similar product to lubricate joint(s) on the Head & Mid pipes before installation.

PLEASE FOLLOW ALL OF THE INSTRUCTIONS CAREFULLY
LTR450 EXHAUST INSTRUCTIONS

INSTALLATION INSTRUCTIONS:

Save your stock parts. Some will be used for installation of the new pipe (ie; heat shield & screws).

1. Remove your stock exhaust system.
2. Be sure your exhaust gasket is still in the cylinder head and is in good shape.
3. Place header pipe into place and use the stock header bolts to hold them in place. Do not completely tighten bolts yet.
4. Place the mid-section onto the end of head pipe.
5. Place the silencer into place and bolt it onto the mid-section using (4) 8mm x20mm bolts.
6. Slide the billet clamps over the muffler to the desired spots and clamp them down with 8mm x 60mm bolts.
7. Install Muffler End-Cap onto the muffler using the supplied 5mm bolts and lock washers.
8. Start tightening from the Head bolts first, before tightening the silencer clamp be sure that the mid-pipe and the headpipe are securely fastened together then tighten the silencer clamp to the muffler. (Be sure to check all clearances. i.e. hoses, plastics, cables etc...)
9. Before starting your ATV with the Stage IV exhaust installed, clean the stainless steel sections (carburetor cleaner/brake cleaner, etc.) so as to remove all oils left from your hands during installation.
10. After your first ride please re-check all the hardware tightness.

To take full advantage of your new Stage IV Exhaust System, Trinity Racing highly recommends purchasing our Stage IV Powerflow intake System and Stage IV EFI fuel controller to optimize your intake and electronic fuel injection systems.

Without a Stage IV EFI fuel controller, your ATV will run a lean fuel mixture which can cause engine damage or failure.

THANK YOU FOR YOUR BUSINESS. HAVE A FUN AND SAFE RIDE!

TRINITY RACING • 9242 HYSSOP, RANCHO CUCAMONGA, CA 91730
WWW.TRINITYRACING.COM • 909.373.1337 • INFO@TRINITYRACING.COM



 
WARNING!

1.877.FASTOYS


TRINITY RACING DOES NOT TAKE RESPONSIBILITY FOR DAMAGES THAT MAY OCCUR DURING OPERATION OF YOUR VEHICLE UNDER IMPROPER JET SETTINGS. IT IS THE FINAL RESPONSIBILITY OF THE OWNER/RIDER TO ADJUST JETTING TO SPECIFIC RIDING CONDITIONS AND ELEVATION BEFORE RIDING.

PARTS LIST:

- (1) HEAD PIPE
- (1) MID-SECTION
- (1) SILENCER
- (2) BILLET ALUMINUM SILENCER CLAMP
- (1) MUFFLER END-CAP
- (4) 8MM X 20MM BOLTS
- (2) 8MM X 45MM BOLT
- (6) 5MM X 16MM BOLTS
- (6) 5MM LOCK WASHERS



 (2) 8x45mm Bolt



(4) 8x20mm Bolts



(6) 5x16mm Bolts



(6) 5mm Lock Washers

THANK YOU FOR YOUR BUSINESS. HAVE A FUN AND SAFE RIDE!

TRINITY RACING • 9242 HYSSOP, RANCHO CUCAMONGA, CA 91730

WWW.TRINITYRACING.COM • 909.373.1337 • INFO@TRINITYRACING.COM